GRACO®

Tot Wheels Entertainer™

Activity Center

OWNER'S MANUAL

Model No. _____
Serial No. _____

Dear Customer,

Please fill in the model and serial numbers above from the label on the underside of the tray.

Models 4430 and 4440 Series

Congratulations on your purchase of a Graco® Tot Wheels Entertainer™ activity center!

Graco is the recognized leader in the design and manufacture of quality baby products. We believe your new Graco® Tot Wheels Entertainer™ activity center is a wise choice, promising many hours of enjoyment for your baby.

Before using your activity center, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you use your activity center properly.

Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak with us about your product, please contact our Customer Service Department at 1-800-345-4109 or visit our Internet website, www.gracobaby.com. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

⚠ WARNING **L**

Graco is concerned about the safety of every child who uses one are equally concerned about the safety of their children. There a help minimize the risk that a baby using one of our mobile activit charge of the baby should always follow these rules.

1. Never leave your baby unattended.

Most accidents happen to children while they are unsupervised. A the baby at all times keeping the baby under a watchful eye. Bec speed and is eager to explore all sorts of potential hazards, direc times. If you believe proper supervision of your baby cannot be g which the baby cannot be adequately protected while using our p and that you consider instead an activity center without wheels, s

2. Properly prepare your baby's play s

Potential hazards in the room must be removed or guarded agai mind that the mobile activity center gives the baby the ability to r otherwise be possible. That means it's important to prepare play reach, and closing doors to keep the baby away from potential h

- Stairs
- Steps
- Raised thresholds
- Driveways and sidewalks
- Ramps or inclines
- Decks
- Ranges, heaters, fireplaces, hot liquids and other heat sources
- Blind
- Obje
- Dang
- Pots
- Book
- Bath
- Swim
- Any

Only your commitment to safety can give yo

When to use your Tot Wheels Entertai

- Your baby should be able to sit unaided and be able to support most of his/her body weight with his/her legs (about 6 months old).
- Both feet should be able to touch the floor.

When NOT to use your Tot Wheels En

- Do not use until your child can sit up alone.
- When your child can walk unaided.
- When your child reaches 30 lbs. in weight.
- When your child has grown over 32 inches in height.
- If your activity center has become broken or damaged.
- If you haven't prepared a safe play space for your baby.

Other things to avoid

- Don't lift or carry your baby in the activity center.
- Don't adjust the activity center with your baby in it.
- Don't use the activity center for commercial use.
- Don't use the activity center if it is broken or damaged.

Graco® activity centers have been designed with your child's enjoy by following these guidelines and using simple common sense. Let's

© 1999 Graco 303-9-99 303999

.et's play safe.

e of our products. We know that parents and other caregivers re certain safety precautions which you must always take to y centers will be harmed. Specifically, the parent or caregiver in

At a minimum, the caregiver should be in the same room with cause a baby can propel a mobile activity center at surprising ct and diligent supervision by the caregiver is required at all guaranteed, or that your home presents particular dangers from mobile activity center, we suggest that you not use this product swing, playard, or other fine Graco® product for your baby.

space — neutralize potential hazards.

nst before placing a baby in a mobile activity center. Keep in move around the play area much more quickly than would space by installing and using gates, removing objects from azards, such as:

l or drape cords
cts on tables
gling electrical cords or small appliances
and pans on stoves
ks on shelves
tubs or open toilets
nming pools or other containers filled with liquid
other dangers unique to your environment

ur child the safe, happy playtime you desire.

iner™ activity center

- When you are able to watch your baby at all times while playing in the activity center.
- When you have prepared your baby's play space according to these guidelines.

ntertainer™ activity center

- If the tray of your activity center is lower than your baby's waist level when your child stands in the activity center.
- If you haven't blocked access to stairs and steps.
- If you haven't assembled the activity center according to these instructions.

- Don't use the activity center with your child in it on a table or countertop.
- Keep dangling electrical cords out of baby's reach, such as an iron on an ironing board, lamp cords, etc.

ment in mind. It is your responsibility to ensure your baby's safety s work together to keep your baby safe and happy.

⚠ WARNING

STAIR HAZARD:

Avoid serious injury or death.
Block stairs/steps securely before using walker.

Avoid falls and other hazards. Never allow walker to be pushed while child is in it.

Never leave child unattended. Always keep child in view while in walker.

Use only on flat surfaces free of objects that could cause the walker to tip over.

To avoid burns, keep your child away from hot liquids, ranges, radiators, space heaters, fireplaces, etc.

To reduce the chance of your child slipping out of the seat, check that both of your child's feet touch the floor.

Never carry the product with the child in it.

Discontinue using walker should it become damaged or broken.

Read all instructions before assembly and use of this product.

Keep instructions for future use.

PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your activity center.
If any parts are missing, call Customer Service at 1-800-345-4109 or visit our Internet website, www.gracobaby.com..

THIS PRODUCT REQUIRES ADULT ASSEMBLY.

Tools required: Wrench or pliers, screwdriver

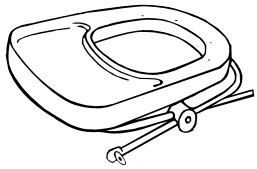
Tray

Nut

Pin (2)

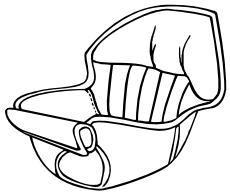
Seat

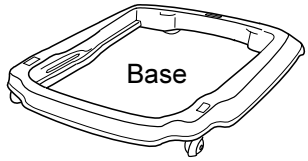
Base

Spoiler
(on certain models)


Seat rod with threads

Screw (4)

Attaching the Seat

Step 1.

On playtray models, remove playtray from activity center tray by unsnapping both side tabs from under tray.

Step 2.

Insert the pegs on the seat back into the four holes located at the rear of the tray.

Underneath the tray, insert the four screws into the centers of the pegs. Press down on the seat back to help the screws connect with pegs. **Tighten the screws securely,** but do not overtighten.

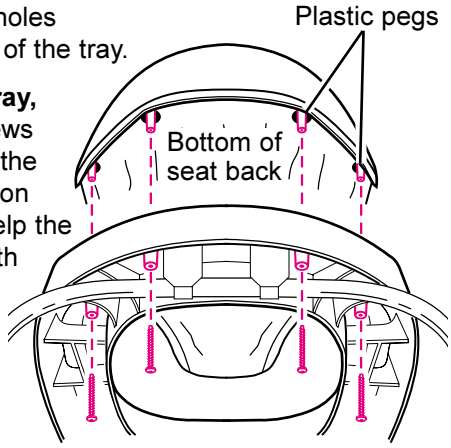

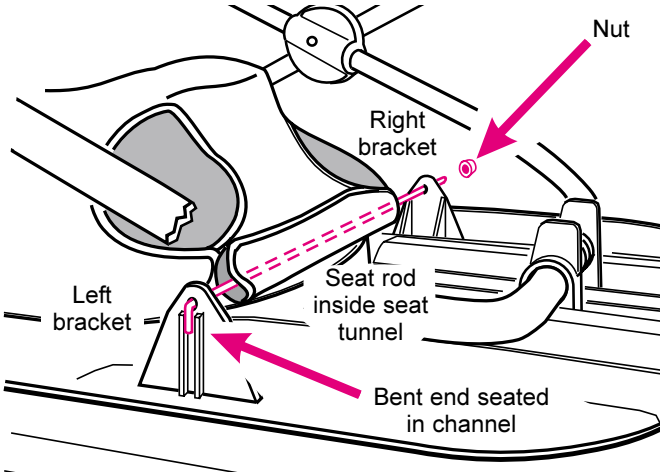

Step 3.

With the tray assembly upside down and its front facing you, pull up on one of the tube ends until the tubes snap into the first height position.

Insert seat rod through hole in left bracket, then through the tunnel of the seat.

Step 4.

Now push the threaded end of the seat rod through the right bracket hole. Turn the bent end of the rod so it fits securely into the left bracket channel. Push it into place.

Place nut on seat rod threads and **tighten securely** with wrench or pliers.

Attaching the Base

Step 1.

Place base on floor with wheels down.

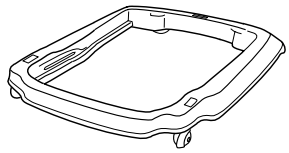

Step 2.

Open tubes of tray assembly as shown until they latch.

Step 3.

Front tube has plastic “T” ends. Tilt tray assembly as shown. Insert one plastic “T” into slot on the inside front of the base. Repeat on opposite side, flexing tube inward if needed to engage the slot.

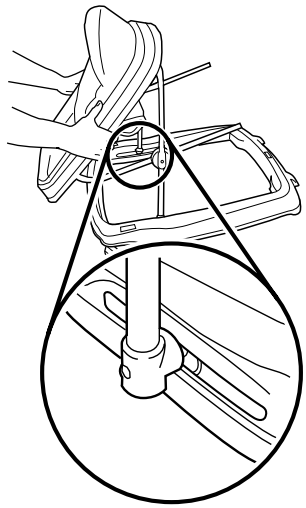

Step 4.

Lower rear tube so holes in ends of tube line up with two holes in back of activity center base.

Be sure that plastic “T” pieces remain in their slots.

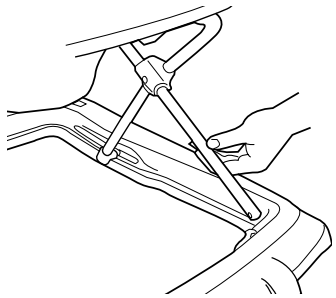

Step 5.

Insert pin into hole as shown, through tray tube, and out through base hole on the other side.

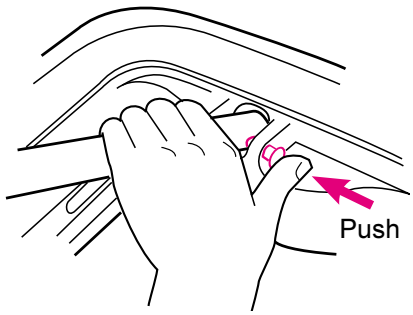

Press firmly until tab snaps over head of pin. Repeat on other side.

Be sure all parts of tray and base are securely fastened, with “T” pieces in their slots and tabs holding pins firmly.

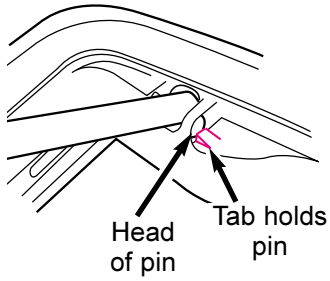

Adjusting the Activity Center

⚠WARNING Remove your child from the activity center before making any adjustments.

Step 1.

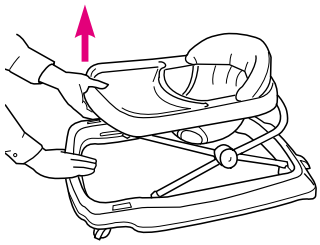

To raise your activity center, hold the base with one hand while lifting the tray with the other hand.

Adjust the tray so that it is no lower than waist level when your child is standing in the activity center.

Step 2.

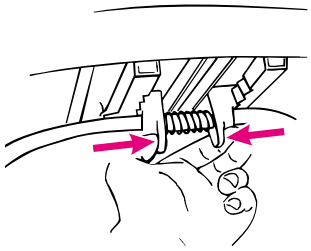

To lower (or fold) your activity center, reach underneath the tray and squeeze the finger latches, **holding them in** while you lower the tray. Tray should lower easily. **DO NOT force tray down** or unit could be damaged.

To Use Parking Stands (on certain models)

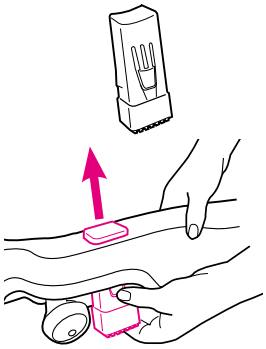

To install parking stands (two in the front and one in the back), lift base slightly, depress button on front of stands and push stands up until they snap into place.

To use parking stands, lift base slightly and push stands down until they snap into place.

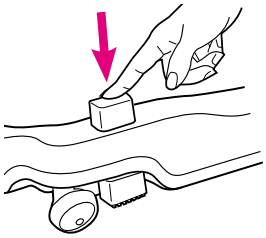

To release parking stands, lift base slightly and depress button on front of stands. Push stands upward into storage position.

⚠WARNING

- **When parking stands are in use, it is still possible for your child to move the activity center.**
- **Be sure to engage both parking stands.**
- **Never place the activity center on a table or countertop.**

Friction Strip Feature

⚠WARNING Avoid serious injury or death. DO NOT use product without the five friction strips under the base.

- Make sure strips are kept clean.
- Clean strips with WATER ONLY.

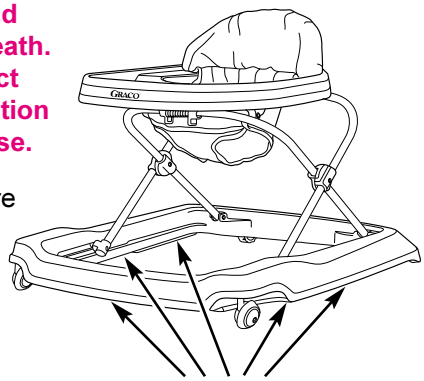

Friction strips under base

Caring for your activity center

Make sure five friction strips under base are kept clean. Clean with water only.

For cleaning vinyl seat, metal and plastic parts other than friction strips, use only household soap or detergent and warm water. NO BLEACH.

Excessive exposure to sun or heat could cause fading or warping of parts.

To Attach the Spoiler (on certain models)

Line up the pegs on the bottom of the spoiler with the two holes at the back of the activity center and push the spoiler in until it snaps in place. It will not be removable.

Do not allow spoiler to block seat by inserting it backwards.

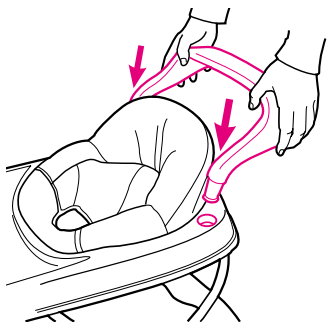

⚠WARNING Avoid falls and other hazards. Never allow unit to be pushed while child is in product.

Installing the Playtray (on certain models)

Do not install the playtray while your baby is in the activity center.

CHECK that you have all the parts listed at right before assembling your playtray.

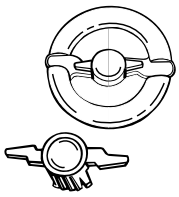
Steering wheel and cap

Teether and stalk (style may vary)

Phone and cord

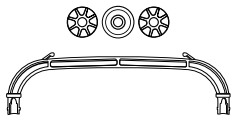
Bar, two beads, one ring

Music key (3)

Stickers

Step 1.

Assemble the toys on the tray as shown.

Push and twist the ring and two beads onto the toy bar.

Snap the toy bar into the holes in the playtray; **slight curve in toy bar must curve away from steering wheel**. Be sure both ends of the toy bar are firmly snapped into the playtray.

Once the toy bar is inserted into the playtray, you will not be able to remove it.

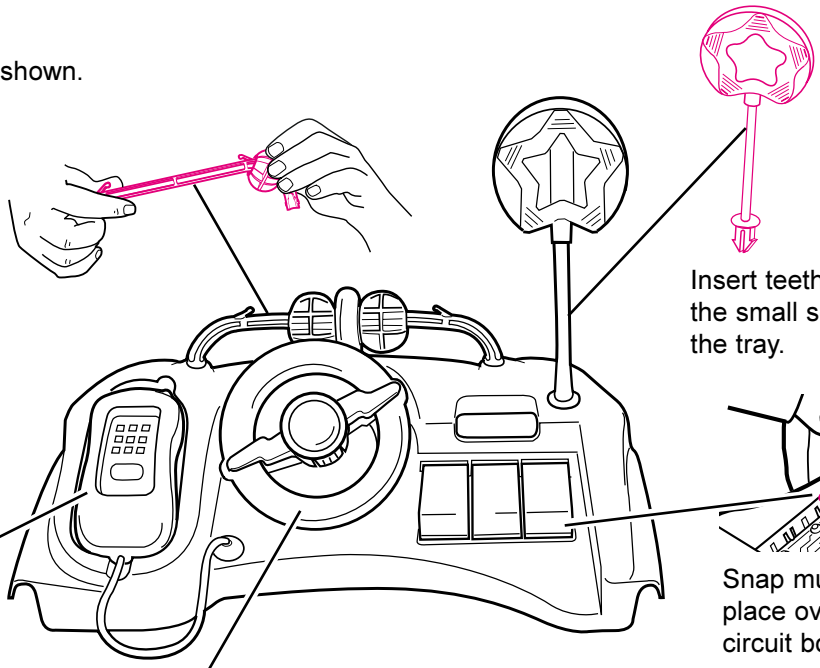

Insert teether stalk into the small square hole in the tray.

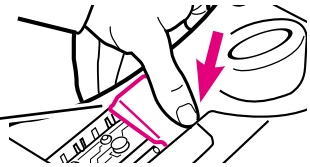

Snap music keys in place over the printed circuit board.

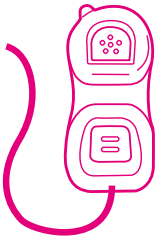

Push end of phone cord through small hole in tray, then tie a knot under the tray.

Pull on phone cord to make sure cord is secure.

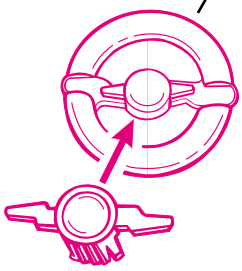

Push wheel cap onto steering wheel, then push assembly into large hole in tray. Check that all four tabs go into hole in tray.

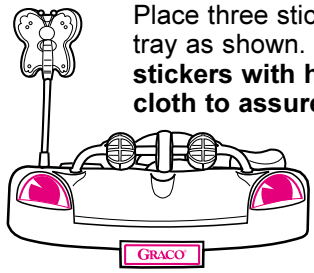

Place three stickers on front of tray as shown. **Rub over stickers with hand or clean cloth to assure adhesion.**

Step 2.

Line up front of playtray with front edge of activity center tray as shown.

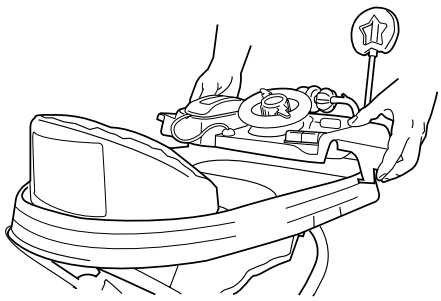

Step 3.

Push playtray down so both side tabs snap under the activity center tray.

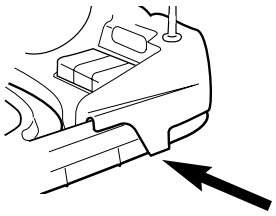

Step 4.

CHECK that playtray is secure on activity center by pulling up on playtray.

⚠WARNING Do not lift this product by the playtray.

Removing the Playtray

To remove tray, pull the two side tabs outward, and lift up playtray.

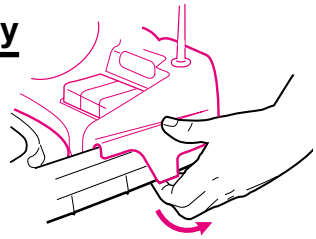

To Assemble the Mix 'N Move™ Toy Gym (on certain models)

Before assembling, check that you have all the parts listed below:

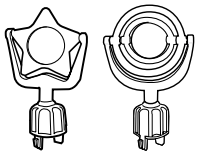

Mix 'N Move toys
(styles may vary)

Mounting post and cap (2 each)

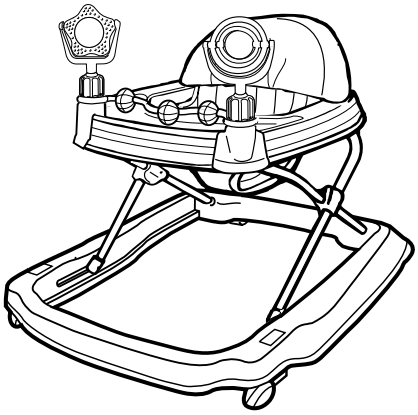

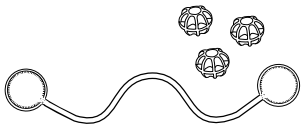

Bar and beads

Step 1.

To mount beads on bar: flatten ring at one end of bar as shown and push through hole in center of each bead.

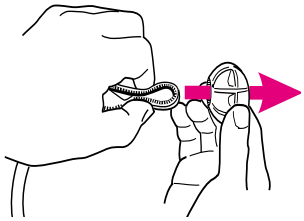

Step 2.

Place ring on top of a mounting post. Shorter teeth must be on the bottom, as shown. Top of mounting post will be even with top of ring. Snap cap into place inside mounting post and turn it up to one half turn until it locks in place. Repeat with the other ring, post and cap.

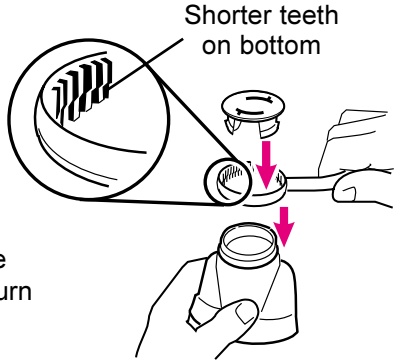

Step 3.

Mount posts onto front corners of activity center tray as shown until they snap securely into place. Center of bar should curve away from the seat, not toward it.

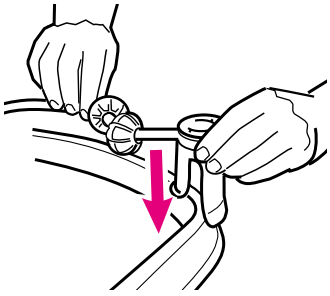

Step 4.

Insert the two prongs on a toy base into a cap at the notches.

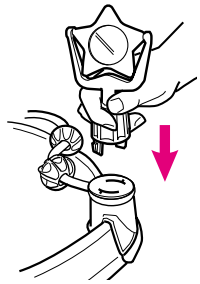

Step 5.

Turn toy base one quarter turn until you feel the toy snap into place. Check that toy is firmly inserted by pulling on the toy.

Toy is removable (turn it the other way with a little pressure) so that you can replace it with other toys when desired (sold separately—see the enclosed leaflet).

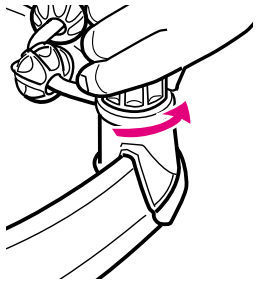

Replacement Parts

Instructions for ordering activity center parts:

Complete form below. Your activity center model number **MUST** be included on the form to ensure proper replacement parts. **Your model number can be found on a sticker on the underside of the tray. Payment must accompany your order.**

Parts List:	Price:**
Tray	$ 15.00
Seat	$ 13.00
Rear wheel	$ 8.00 (each)
Seat rod/nut	$ 7.00
Caster	$ 5.00 (each)
Hardware	$ 5.00
Pin	no charge
Parking stand*	$ 5.00 (each)
Mix 'N Move toy gym*	$ 18.00
Mix 'N Move star*	$ 8.00
Mix 'N Move spinning rings*	$ 8.00
Playtray with all toys*	$ 20.00
Spoiler*	$ 7.00

* Certain models only

** Prices subject to change without notice.

IF YOU NEED HELP

If you have any questions or if you need any part not listed, please call toll-free:

1-800-345-4109

or visit our Internet website, www.gracobaby.com.

Return the form below with payment to:

GRACO CHILDREN'S PRODUCTS INC.
CUSTOMER SERVICE DEPARTMENT
P.O. BOX 100, MAIN STREET
ELVERSON, PA 19520

Model Number

_____
(Must be filled in)

- ☐ Tray
- ☐ Seat
- ☐ Rear wheel
- ☐ Seat rod/nut
- ☐ Caster
- ☐ Hardware
- ☐ Pin
- ☐ Parking stand
- ☐ Toy gym
- ☐ Star
- ☐ Spinning rings
- ☐ Playtray with toys
- ☐ Spoiler

Total:_____

Shipping & handling:_____$5.00

6% sales tax (PA only):_____

Total amount due:_____

SHIP TO:

_____
Name

_____
Address

_____
City, State, Zip

(____)_____
Telephone

☐ Check enclosed (payable to Graco Children's Products Inc.)

☐ Charge to credit card:
- ☐ Visa
- ☐ MasterCard
- ☐ Discover

Account #:
_____

Expiration date:_____

Signature:
_____